

# SUUNTO X6

## POCKET GUIDE

### [START]

- Chrono mode: start, save lap
- Hiking mode: save bookmark
- >2 sec. = Activate the backlight

### [ARROW]

- Scroll the menus and memory up and down
- Change the values of settings



### [STOP/CI]

- Return to the previous menu or to the previous selection without accepting the selection
- Chrono mode: stop
- Other modes: change the lowest field
- >2 sec. = Return to the main display without accepting the last selection

### [SUUNTO]

- Navigate to a lower menu level
- Accept the selections
- >2 sec. = Return to the main display and accept the selection



  
**SUUNTO**  
www.suunto.com

