

# **SUUNTO ESSENTIAL**


## USER GUIDE


1. SAFETY.....	4
2. Welcome.....	5
3. Introduction.....	6
4. Getting started.....	7
5. General settings.....	9
5.1. Changing units.....	9
5.2. Changing general settings.....	9
5.2.1. Button tone.....	9
5.2.2. Tone guides.....	10
5.2.3. Backlight.....	10
5.2.4. Language.....	10
5.2.5. Activating button lock.....	10
6. Using time mode.....	11
6.1. Changing time settings.....	11
6.1.1. Setting time.....	11
6.1.2. Setting date.....	11
6.1.3. Setting dual time.....	12
6.1.4. Setting sunrise and sunset times.....	12
6.2. Using stopwatch.....	12
6.3. Using countdown timer.....	12
6.4. Setting alarm.....	13
7. Using ALTI & BARO mode.....	14
7.1. How Alti & Baro works.....	14
7.1.1. Getting correct readings.....	14
7.1.2. Getting incorrect readings.....	14
7.2. Setting profiles and reference values.....	15
7.2.1. Matching profile to activity.....	15
7.2.2. Setting profiles.....	15
7.2.3. Setting reference values.....	15
7.3. Using weather trend indicator.....	16
7.4. Activating storm alarm.....	16
7.5. Using altimeter profile.....	17
7.5.1. Using altitude difference measurer.....	17
7.5.2. Recording logs.....	17
7.6. Using barometer profile.....	18
7.6.1. Recording logs.....	19
7.7. 自動プロファイルの使用.....	19
7.8. Using depth meter profile.....	20

7.8.1. Recording logs in depth meter profile.....	20
8. コンパスモードの使用.....	21
8.1. 正確な方位の読み取り.....	21
8.1.1. Calibrating compass.....	21
8.1.2. Setting declination value.....	22
8.2. Using compass.....	22
8.2.1. Using bearing tracking.....	23
9. Using memory.....	24
9.1. Alti-baro memory.....	24
9.2. Viewing and locking logs.....	24
9.2.1. Viewing logs.....	24
9.2.2. Locking and unlocking logs.....	25
9.3. Choosing recording interval.....	25
10. お手入れとサポート.....	26
10.1. 取り扱い方法.....	26
10.2. Replacing battery.....	26
10.3. サポートの利用.....	27
11. Specifications.....	28
11.1. Icons.....	28
11.2. Technical data.....	29
11.3. 保証.....	29
11.4. CE.....	30
11.5. Patent notice.....	31
11.6. 商標.....	31
11.7. 著作権.....	31

# 1. SAFETY

## Types of safety precautions:


 **警告:** - is used in connection with a procedure or situation that may result in serious injury or death.

 **注意:** - is used in connection with a procedure or situation that will result in damage to the product.

 **重要:** - is used to emphasize important information.

## Safety precautions:

 **警告:** DO NOT USE FOR SCUBA DIVING.

 **警告:** ALLERGIC REACTIONS OR SKIN IRRITATIONS MAY OCCUR WHEN PRODUCT IS IN CONTACT WITH SKIN, EVEN THOUGH OUR PRODUCTS COMPLY WITH INDUSTRY STANDARDS. IN SUCH EVENT, STOP USE IMMEDIATELY AND CONSULT A DOCTOR.

 **注意:** DO NOT EXPOSE TO RAPID TEMPERATURE CHANGES.

 **注意:** DO NOT APPLY SOLVENT OF ANY KIND.

 **注意:** DO NOT APPLY INSECT REPELLENT.

 **注意:** TREAT AS ELECTRONIC WASTE.

 **注意:** DO NOT KNOCK OR DROP.

## 2. Welcome

*“For nearly 80 years Suunto has provided accurate, reliable information to people in need of it. Our instruments enable our users to reach their goals more effectively and get more out of their sports experience. Our products are often very critical to the user. Therefore we at Suunto take pride in maintaining highest quality standards for our products.”*

Founded in 1936, Suunto is the world leader in precision compasses, dive computers and wristop altimeters. Trusted by climbers, divers and explorers on every continent, Suunto Outdoor instruments deliver legendary design, accuracy and dependability. In 1987, Suunto pioneered the first dive computer, followed by the first Altimeter-Barometer-Compass watch in 1998. Suunto remains the foremost choice of today's outdoor professional. To learn more about Suunto products and the people who use them, visit [www.suunto.com](http://www.suunto.com).

## 3. Introduction

Suunto Essential brings together an altimeter, barometer and an electronic compass in one package. It also has clock, stopwatch and calendar functions.

This User Guide explains the features, how they work, and how you access them. In addition, we have included examples of how you can use them in real life situations.


Each main chapter explains a mode and its views. It also gives you information on how to set and use these views.


Suunto Essential gives you readings on time, barometric pressure and altitude. Additional information is given for every reading so that you can make the most of your favorite outdoor activities.

## 4. Getting started

### Basic settings

Press any button and your Suunto Essential will activate. You are then prompted to set the language, units (imperial or metric), time and date. Use the upper right [+] button and lower right [- Light] button to change the settings. Accept and move to the next menu item by pressing the right middle [Mode] button. You can always return to the preceding menu item by pressing the lower left [View] button. When the settings are set as you want, you can start using the basic time features of your Suunto Essential.

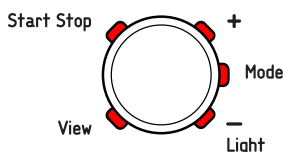

 *X E*: You need to set the altimeter, barometer and compass to get correct readings. Please refer to the User Guide for detailed information on setting these properly.

### Modes

Your Suunto Essential has three modes: **TIME**, **ALTI & BARO** and **COMPASS**. These modes are explained in detail in the User Guide. The enabled mode is indicated by a rectangle around the mode name. You switch between the main modes with the right middle [Mode] button. Try it!




### Views

Each mode has a set of views that you access with the lower left [View] button. Views are presented in the lower part of the display. Views contain supplementary information about the enabled mode, for example, viewing seconds as supplementary information in the **TIME** mode. Some views are also interactive.

Suunto Essential has four interactive views:

- Stopwatch (**TIME** mode)
- Countdown timer (**TIME** mode)
- Log recorder (**ALTI & BARO** mode)
- Altitude difference measurer (**ALTI & BARO** mode)


When interactive views are enabled, you can start, stop and restart them with the upper left [Start Stop] button and reset them by keeping the upper right [+] button pressed. Enter the stopwatch in **TIME** mode and try it out!

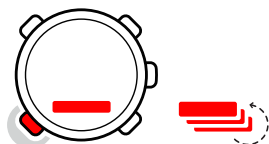

## Menu

In **MENU** you can change values, change the general settings and units, or view logs stored in the logbook. To enter **MENU**, keep the middle right [Mode] button pressed while in the **TIME**, **ALTI & BARO** or **COMPASS** mode. The segments in the outer part of the display indicate your transition time. Exit **MENU** by pressing the upper left [Start Stop] button.

Whenever an exit option is available in **MENU**, this is indicated with an “X” on the screen next to the [Start Stop] button. Get familiar with entering and exiting **MENU**!

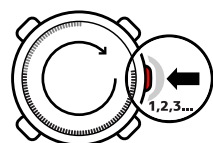

## Backlight

You can activate the backlight in any mode by pressing the lower right [- Light] button. The backlight turns off automatically after 5 seconds. If you want to see the backlight when you are in **MENU**, you need to activate it in the **TIME**, **ALTI & BARO** or **COMPASS** mode before entering **MENU**. The backlight will return to normal when you return to a mode.

## Button lock

You can activate and deactivate the button lock by keeping the lower right [-Light] button pressed.



*X*  $\bar{\text{E}}$ : You can change views and use the backlight when the button lock is activated.

## Changing values

To change a setting, you have to be in **MENU**. To enter **MENU**, keep the right middle [Mode] button pressed down in the **TIME**, **ALTI&BARO** or **COMPASS** mode. Any changes you make in **MENU** take effect immediately. For example, if you enter TIME-DATE in **MENU** and change the time from 12:30 to 11:30 and exit. The time will be set to 11:30.



## 5. General settings

Before you start to use your Suunto Essential, it's a good idea to set the measurement units and general settings according to your preferences. General settings are changed in **MENU**.

### 5.1. Changing units

In **UNITS** you select the measurement units, including:

- **TIME** : 24h/12h
- **DATE**: dd.mm/mm.dd
- **TEMPERATURE** : °C/°F (Celsius/Fahrenheit)
- **AIR PRESSURE**: hPa/inHg
- **ALTITUDE**: meters/feet

To enter **UNITS** in **MENU**:

1. Enter **MENU** by keeping [Mode] pressed in the **TIME** , **ALTI & BARO** or **COMPASS** mode.
2. Scroll down to **UNITS** using [- Light] .
3. Enter with [Mode] .

To change units:

1. In **UNITS**, scroll between the list items using [+] and [- Light] .
2. Enter with [Mode] .
3. Change the values using [+] and [- Light] , accept with [Mode] .
4. Exit **MENU** with [Start Stop] .

### 5.2. Changing general settings

In **GENERAL** you set the general settings, including:

- **BUTTON TONE**: on/off
- **tone GUIDE**: on/off
- **BACKLIGHT**: light button/any button
- **LANGUAGE**: English, French, Spanish, German

To enter **GENERAL** in **MENU**:

1. Enter **MENU** by keeping [Mode] pressed in the **TIME** , **ALTI & BARO** or **COMPASS** mode.
2. Scroll down to **GENERAL** using [- Light] .
3. Enter with [Mode] .

#### 5.2.1. Button tone

In **BUTTON TONE** you turn the button tone on or off. A button tone is emitted every time a button is pressed, confirming an action.

1. In **GENERAL**, select **BUTTON TONE**.
2. Switch the button tone on or off with [+] and [- Light] .

### 5.2.2. Tone guides

In **TONE GUIDE** you turn the tone guides on or off. You will hear tone guides when:

- You change a setting value
- You set the altitude reference value
- You start or stop the log recorder
- You mark an altitude point while you are recording logs
- You start or stop the stopwatch
- The device switches between the **ALTIMETER** and **BAROMETER** profile when you are using the **AUTOMATIC** profile.

To turn tone guides on or off:

1. In **GENERAL**, select **TONE GUIDES**.
2. Switch the tone guides on or off with [+] and [- Light] .

### 5.2.3. Backlight

In **BACKLIGHT** you switch between two different light features: any button and light button.

To set the backlight to normal or night use:

1. In **GENERAL**, select **BACKLIGHT**.
2. Switch the backlight between **LIGHT BUTTON** and **ANY BUTTON** with [+] and [- Light] .

When **LIGHT BUTTON** has been selected, you can activate the backlight with [- Light] . The backlight is turned off automatically after 5 seconds. If you want to see the backlight when you are in the **MENU**, you need to activate it in the **TIME, ALTI & BARO** or **COMPASS** mode before entering the **MENU**. The backlight will then be activated until you exit **MENU**.

When **ANY BUTTON** has been selected, the backlight is activated every time you push a button.


### 5.2.4. Language

In **LANGUAGE** you choose the language of your Suunto Essential user interface (English, German, French or Spanish).

To choose a language:

1. In **GENERAL**, select **LANGUAGE**.
2. Select a language from the list with [+] and [- Light] .

### 5.2.5. Activating button lock

You can activate and deactivate the button lock by keeping [-Light] pressed down. When the button lock is activated, it is indicated with a lock symbol  .




*X E: You can change views and use the backlight when the button lock is activated.*

## 6. Using time mode

The **TIME** mode handles time measurement.

**TIME** ALTI & BARO COMPASS

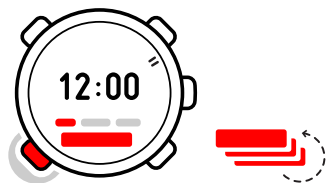

With [View] you can scroll through the following views:

- Date: current weekday and date
- Seconds: seconds as numbers
- Dual time: time in another time zone
- Sunrise and sunset : time of sunrise and sunset at a specific location
- Stopwatch: sport timer
- Countdown timer: alarm goes off after a set duration
- Empty: no additional view



*X E: The seconds view in the lower panel of the screen turns off after 2 hours in idle state to save battery. Activate by re-entering the view.*

### 6.1. Changing time settings

You change the time settings in **MENU**.

To enter time settings in **MENU**:

1. Enter **MENU** by keeping [Mode] pressed down.
2. Scroll down to **TIME-DATE** using [- Light] .
3. Enter with [Mode] .

#### 6.1.1. Setting time

In **TIME** you set the time.

To set the time:

1. In **TIME-DATE**, select **TIME**.
2. Change the hour, minute and second values with [+] and [- Light] .

#### 6.1.2. Setting date

In **DATE** you set the month, day and year.

To set the date:

1. In **TIME-DATE**, select **DATE**.
2. Change the year, month and day values with [+] and [- Light] .


To change the format in which the time is displayed, see *5.1. Changing units*.

### 6.1.3. Setting dual time

In **DUAL TIME** you can set the time for a location in a different time zone.

To set dual time:

1. In **TIME-DATE**, select **DUAL TIME**.
2. Change the hour, minute and second values with [+] and [- Light] .

 *X E: We recommend that you set the current time at your current location as the main time because the alarm clock emits alarms according to the main time.*


You are traveling abroad and you set the dual time to be the time at home. The main time is the time at your current location. Now you always know the local time and you can quickly check what time it is at home.

### 6.1.4. Setting sunrise and sunset times

In **SUNRISE** you select a reference city that your Suunto Essential uses to give you sunrise and sunset times.

To set sunrise and sunset times:

1. In **MENU**, select **SUNRISE**.
2. Scroll through the locations with [+] and [-Light] .
3. Select a location with [Mode] .

 *X E: If you want to set the sunrise and sunset times for a location that is not listed in your device, select another reference city from the same time zone. Select the closest city north or south from your location.*

You're hiking in Algonquin, a huge national park north of Toronto. You want to know when the sun sets, so that you know when to start putting up your tent for the night. You choose "Toronto" as your reference sunrise-sunset city. Your now tells you when the sun will set.

## 6.2. Using stopwatch

The stopwatch measures time. Its resolution is 0.1 seconds.

To use the stopwatch:

1. In the **TIME** mode, select the stopwatch view.
2. Start, stop and restart the stopwatch with [Start Stop] .
3. Keep [+] pressed to reset the stopwatch.

Your friend is training for a running competition, and needs to know how long it takes him to run the 100 m dash. You start the stopwatch the instant he breaks from the blocks. You stop the stopwatch the instant he crosses the finish line. The result: 11.3 seconds. Not bad!

## 6.3. Using countdown timer

In **COUNTDOWN** you can set the countdown timer to count down from a preset time to zero. It sounds an alarm when zero is reached. The default is 5 minutes.

To change the default countdown time:

1. In **MENU**, select **TIME-DATE**.
2. Select **COUNTDOWN**.
3. Set the timer minutes and seconds (maximum 99 minutes and 59 seconds).
4. Accept with [Mode] .

To start counting down:

1. In **TIME** mode, select the countdown timer view.
2. Start, stop and restart with [Start Stop] .
3. Keep [+] pressed to reset the timer.

You're on a hiking expedition. It's morning. You wake up, come out of your tent, and start to make breakfast at your campfire. This time, you want 8-minute eggs. You set the countdown timer to 8 minutes with your eggs in the pot and wait for the water to come to a boil. When the water boils, you engage the countdown timer. At the eight-minute point, your gives the alarm. Presto! Perfect 8-minute eggs.

## 6.4. Setting alarm

You can use your Suunto Essential as an alarm clock.

To access the alarm clock and set the alarm:


1. In **MENU**, select **TIME-DATE**.
2. Select **ALARM**.
3. Switch the alarm on or off with [+] and [- Light] .
4. Accept with [Mode] .
5. Use [+] and [- Light] to set the hours and minutes.

When the alarm is switched on, the alarm symbol 📌 appears on the display.


When the alarm sounds, you can either snooze or turn the alarm off.

If you choose **YES** or do nothing, the alarm stops and restarts every 5 minutes until you stop it. You can snooze up to 12 times for a total of 1 hour. If you choose **NO**, the alarm stops and restarts the same time the following day.




 **ヒント:** When the snooze is turned on, you can deactivate it in the **TIME** mode by keeping [View] pressed down.

You want to wake up early tomorrow morning. You set your alarm for 6:30 before you go to bed. The alarm wakes you up at 6:30 the next morning but you want to sleep for another 5 minutes. You choose YesYes when the device asks you if you want to snooze. After 5 minutes the alarm goes off again. This time you get up and happily start preparing for your trip. What a difference five minutes can make!

 **✖️:** The alarm symbol is blinking when the snooze is activated. When snooze is deactivated, the alarm symbol stops to blink.

## 7. Using ALTI & BARO mode

In the **ALTI & BARO** mode you can view the current altitude, barometric pressure or snorkeling depth. It offers four profiles: **AUTOMATIC**, **ALTIMETER**, **BAROMETER** and **DEPTH METER** (see 7.2.2. *Setting profiles*). You can access different views depending on which profile is activated when you are in the **ALTI & BARO** mode.

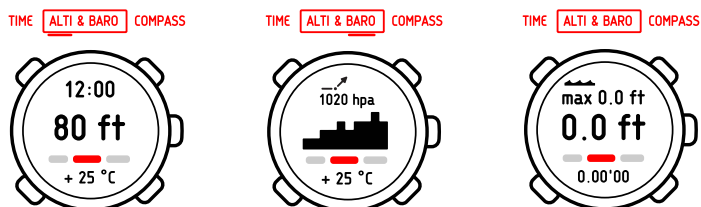

### 7.1. How Alti & Baro works

To get the right readings from **ALTI & BARO**, it is important to understand how Suunto Essential calculates altitude and sea level air pressure.

Suunto Essential constantly measures absolute air pressure. Based on this measurement and reference values, it calculates altitude or sea level air pressure.

**⚠ 注意:** *Keep area around sensor free of dirt and sand. Never insert any objects into the sensor openings.*

#### 7.1.1. Getting correct readings

If you are engaged in an outdoor activity that requires you to know the air pressure, you need to enter the altitude reference value for your location. This is found on most topographic maps. Your Suunto Essential will now give you the correct readings.

To get the correct altitude readings, you need to enter the sea level air pressure reference value. The sea level air pressure reference value relevant to your location can be found in the weather section of the local newspaper or on the websites of national weather services.

Absolute air pressure is measured constantly *Absolute air pressure + altitude reference = Sea level air pressure*

\* Absolute air pressure + sea level air pressure reference = Altitude \*

Changes in local weather conditions will affect altitude readings. If local weather changes often, it is advisable to reset the current altitude reference value frequently, preferably before starting your journey when the reference values are available. If local weather is stable, you do not need to set reference values.

#### 7.1.2. Getting incorrect readings

##### altimeter Altimeter profile + standing still + weather change

If your **ALTIMETER** profile is on for an extended period of time with the device in a fixed location while the local weather changes, the device will give incorrect altitude readings.

## altimeterAltimeter profile + altitude moving + weather change

If your **ALTIMETER** profile is on and the weather changes frequently while you climb in altitude or go down in altitude, the device will give you incorrect readings.

## BarometerBarometer profile + altitude moving

If the **BAROMETER** profile is on for an extended period of time as you climb in altitude or go down in altitude, the device assumes that you are standing still and interprets your changes in altitude as changes in sea level air pressure. It will therefore give you incorrect sea level air pressure readings.

You're on the second day of your two-day hike. You realize that you forgot to switch from the BarometerBarometer profile to the altimeterAltimeter profile when you started moving in the morning. You know that the current altitude readings given by your are wrong. So, you hike to the nearest location shown on your topographic map for which a altitude reference value is provided. You correct your altitude reference value accordingly. Your altitude readings are correct again.

## 7.2. Setting profiles and reference values

### 7.2.1. Matching profile to activity

The **ALTIMETER** profile should be selected when your outdoor activity involves changes in altitude (e.g. hiking in hilly terrain). The **BAROMETER** profile should be selected when your outdoor activity does not involve changes in altitude (e.g. surfing, sailing). To get the correct readings, you need to match the profile to the activity. You can either let Suunto Essential decide which profile is most suitable for you at the moment, or you can choose a suitable profile yourself.

### 7.2.2. Setting profiles

To set the profile:


1. In **MENU**, select **ALTI-BARO**.
2. Select **PROFILE**.
3. Choose a suitable profile.

Alternatively you can set the profile in the **ALTI & BARO** mode by keeping [View] pressed down.

### 7.2.3. Setting reference values

To set the reference value:


1. In **MENU**, select **ALTI-BARO**.
2. Select **REFERENCE** and choose between the **ALTIMETER** and **SEA LEVEL**.
3. Set the known reference value using [+ ] and [- Light ] .

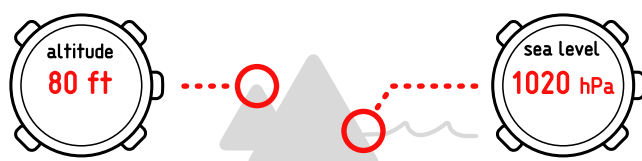

You're hiking and take a break when you see a sign with the current altitude. You check your altitude reading and discover a small difference between the two numbers. You set the altitude reference value on your to match that of the sign.

### 7.3. Using weather trend indicator

The weather trend indicator is located on the upper side of the display. It is displayed in the **TIME** and **ALTI & BARO** modes, providing you with quick reference to check upcoming weather conditions. The weather trend indicator is comprised of two lines forming an arrow. Each line represents a 3-hour period. The right line represents the last 3 hours. The left line represents the 3 hours prior to the last 3 hours. So the line can indicate 9 different patterns in the barometric trend.

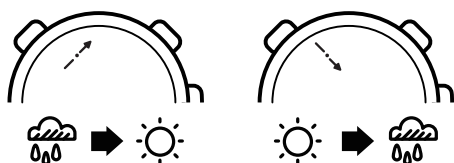

	Situation 3-6 hours ago	Situation last 3 hours
	Dropped heavy (>2 hPa/3hours)	Dropping heavily (>2 hPa/3hours)
	Remained stable	Rising heavily (>2 hPa/3hours)
	Rose heavy (>2 hPa/3hours)	Dropping heavily (>2 hPa/3hours)

**ヒント:** *If the weather trend indicator shows that the air pressure is constantly rising, there is a higher possibility of sunny weather upcoming. Again, if the air pressure is constantly dropping, there is a higher possibility of rainy weather.*

### 7.4. Activating storm alarm

The storm alarm notifies you that a pressure drop of 4 hPa / 0.12 inHg or more has occurred during a 3-hour period. Suunto Essential will activate an alarm and flash an alarm symbol on the display for 20 seconds. The storm alarm only works when you have activated the **BAROMETER** profile in the **ALTI & BARO** mode.

To activate the storm alarm:

1. In **MENU**, select **ALTI-BARO**.
2. Select **STORM ALARM**.
3. Switch the storm alarm on or off with [+ ] and [- Light] .

**ヒント:** *You can stop the storm alarm by pressing any button.*

You are hiking in a dense forest when your activates the storm alarm. The weather has taken a turn for the worse in the last 3 hours - the sky is getting dark. Good thing your warned you, because you need to find shelter from the hard rain that may soon fall.




## 7.5. Using altimeter profile

The **ALTIMETER** profile calculates altitude based on the reference values. The reference values can either be sea level air pressure or a previous point of altitude reference value. When the **ALTIMETER** profile is activated, the word **ALTI** is underlined on the display.

When the **ALTIMETER** profile is activated, you can access the following views with [View] :

- Log recorder: records the altitude changes into logs
- Altitude difference measurer: measures the altitude difference from a set point
- Temperature: measures the current temperature
- Empty: no supplementary information

TIME **ALTI & BARO** COMPASS

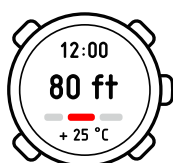

### 7.5.1. Using altitude difference measurer

The altitude difference measurer shows the difference in altitude between a set point and your current position. This feature is especially useful for mountain climbing, for example when you want to track your progress in terms of altitude climbed.

To use the altitude difference measurer:

1. In the **ALTI & BARO** mode, select the altitude difference measurer view.
2. Start, stop and restart it with [Start Stop] .
3. Keep [+] pressed to reset.

You are about to start climbing a mountain that is 3, 280 feet (1000 m) high. You want to be able to check your progress as you climb, so you activate the altitude difference measurer on your . You start climbing, checking your altitude occasionally to see how far you are from the next check point. At some point you start to get tired. You check your altitude, and see that there's still a lot of climbing ahead. Maybe you need to rethink your next check point.

### 7.5.2. Recording logs

The log recorder stores all your movements in altitude between the start and stop times. If you are engaged in an activity in which your altitude changes, you can record the altitude changes and view the stored information later.

You can also set altitude marks (laps), allowing you to view the duration and ascent/descent height between your previous mark and current mark. Your marks are stored in memory and you can access them later.

To record a log:

1. In the **ALTI & BARO** mode, select the log recorder view.
2. Start, stop and restart it with [Start Stop] .
3. When you are recording a log, set laps with [+] .
4. Keep [+] pressed to reset (this can only be done when the recorder is stopped).


Log height difference: shows the measured altitude difference between a log starting point and a log finishing point with the following icons:

	In the additional views:
▲	is displayed when your altitude is above the starting point.
—	is displayed when your altitude is the same as at the starting point.
▼	is displayed when your altitude is below the starting point.
≡	is displayed when you view how much you have ascended from the log start.
≡	is displayed when you view how much you have descended from the log start.

Altitude points are recorded according to the recording interval you have chosen (see 9.3. *Choosing recording interval*).

To change the recording rate:

1. In **MENU**, select **MEMORY**.
2. Select **REC INTERVAL**.
3. Change the recording rate with [+] and [- Light] .

 *メモ:* An estimation of how much time you can record is shown in the lower part of the display when you browse between the recording rates. The actual recording durations may vary slightly depending on your activity during the recording period.

You can access your history of recorded logs, including log details, from **LOGBOOK** in **MENU** (see 9.2. *Viewing and locking logs*).

 *ヒント:* When you have stopped the log recorder, you can enter the logbook and view your current recordings before you reset the recorder.

You're going on another mountain hike. This time you want to record how much you ascend and descend so as to compare the figures with previous hikes. You set your to the altimeter profile and start the log recorder when you begin the hike. After the hike you stop your log recorder and reset it . Now you can compare it with your previous logs.

## 7.6. Using barometer profile


The **BAROMETER** profile shows the current sea level air pressure. This is based on the reference values given and the constantly measured absolute air pressure. Changes in sea level air pressure are presented graphically in the middle of the display. The display shows the recording of the last 24 hours with a recording interval of 30 minutes.


When the **BAROMETER** profile is activated, the word **BARO** is underlined on the display.

When the **BAROMETER** profile is activated, you can access the following views with [View] :

- Temperature: measures the current temperature
- Log recorder: records the altitude changes in logs
- Altitude reference: shows the altitude reference value
- Time: shows the current time

- Empty: no additional view

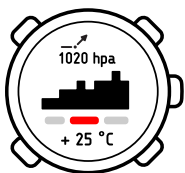

 **メモ:** *If you are wearing your Suunto Essential on your wrist, you will need to take it off in order to get an accurate temperature reading because your body temperature will affect the initial reading.*

A 7-day log of changes in sea level air pressure can be viewed in **ALTI-BARO** memory in **MENU** (see 9.1. *Alti-baro memory*).

You're still hiking and you're getting tired. You decide to take a nap and you set up your tent. Since your altitude will stay the same for a while, you activate the BarometerBarometer profile. When you wake up, you will be able to check changes in sea level air pressure with an eye on the weather.

### 7.6.1. Recording logs

When you are recording logs in the **ALTIMETER** profile, you can switch to the **BAROMETER** profile when you for example take a break during a hike.

The log recorder will continue recording the log, but it will not record changes in air pressure. When the barometer profile is activated, the device assumes you are not moving in altitude, and it will therefore not record any altitude changes. The altitude log will therefore be flat during this period. For information on using the log recorder, see 7.5.2. *Recording logs*.


You can start, stop and reset the altitude measurement while in the **BAROMETER** profile.

You are recording your altitude changes during a hike and decide to take a longer break. You switch to the BarometerBarometer profile. Since the altitude recording continues but no altitude changes are occurring, you go to the log recorder view in the BarometerBarometer profile and stop the altitude recording.

## 7.7. 自動プロファイルの使用

自動プロファイルは、ユーザーの移動状況に応じて高度計と気圧計のプロファイル間で切り替わります。自動プロファイルが有効な場合、ディスプレイの右上に [自動アイコン] が表示されます。有効になっている高度計または気圧計プロファイルビューにアクセスするには、[ビュー] を選択します。

デバイスが 3 分間で 5 メートル移動している状況では、高度計プロファイルが有効になります。12 分間継続してデバイスの移動がないと、気圧計プロファイルが有効になります。

 **メモ:** *自動プロファイルは常時有効にしないでください。サーフィンなどの一部のアクティビティでは、移動の有無を問わず気圧計プロファイルを常時有効にする必要があります。必要に応じて手動でプロファイルの設定を変更してください。*


## 7.8. Using depth meter profile

You use the **DEPTH METER** profile when snorkeling. It shows your current depth and the maximum depth you reached during a snorkeling dive. The maximum depth of the device is 32.8 ft (10m). When the **DEPTH METER** profile is activated, a wave icon appears on the upper left part of the display.

When the **DEPTH METER** profile is activated, you can access the following views with [View] :

- Log recorder: records your snorkeling dives
- Temperature: measures the current temperature
- Time: shows the current time

TIME **ALTI & BARO** COMPASS

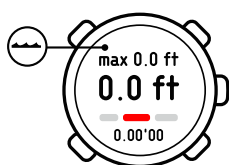


### 7.8.1. Recording logs in depth meter profile

The log recorder in the **DEPTH METER** profile works similarly to the log recorder in the **ALTIMETER** profile, but instead of recording altitude it records the depth of your snorkeling dives.

To record logs in the **DEPTH METER** profile:

1. In the **ALTI & BARO** mode, select the log recorder view.
2. Start, stop and restart it with [Start Stop] . Begin a snorkeling dive.
3. When you return to the surface, reset by holding [+] pressed.

 **注意:** Do not push buttons while the device is under water.

 **メモ:** You need to reset your log recorder in the **ALTIMETER** profile before using the log recorder in the **DEPTH METER** profile. Otherwise, your maximum depth will stay the same as your current altitude above the surface.

 **ヒント:** When you have stopped your log recorder, before resetting it, you can enter the logbook and view your current recordings!

## 8. コンパスモードの使用

コンパスモードでは、磁北を基準にして進行方向を確認することができます。コンパスモードでは、[ビュー] で以下にアクセスできます。

- 時刻：現在の時刻を表示
- 方位：基本方位で現在の進行方向を表示
- 方角追跡：進行方向の方角と設定した方角を表示

コンパスは、1分後に省電力モードに切り替わります。[開始/停止] を押すと再開します。

### 8.1. 正確な方位の読み取り

コンパスモードで正確な方位を読み取るには：コンパス


- 画面の指示に従ってコンパスを正しく調整します ( 8.1.1. *Calibrating compass* を参照 )
- 正しい偏角値を設定します
- デバイスを水平に保ちます
- ジュエリーなどの金属や、磁気を発生させる送電線などから遠ざけてください

#### 8.1.1. Calibrating compass


The device needs to be carefully calibrated during first time use and when the battery is replaced. The device will always prompt you about it when it is needed.

To calibrate the compass:

1. Keep the device level, do not tilt it in any directions.
2. Slowly rotate the device clockwise (around 15 seconds per round) until the compass is activated.


 **メモ:** *If you notice deviations in the compass, you can recalibrate it by keeping it level and rotating it slowly clockwise 5-10 times while in compass mode.*

 **ヒント:** *Re-calibrate the compass before each use for best possible accuracy.*

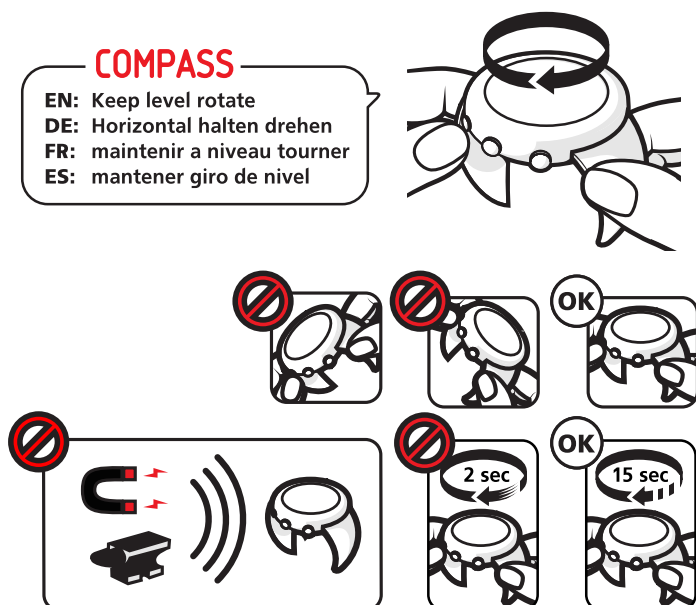

### 8.1.2. Setting declination value

Paper maps point to true North. Compasses, however, point to magnetic North – a region above the Earth where the Earth’s magnetic fields pull. Because magnetic North and true North are not at the same location, you must set the declination on your compass. The angle in between magnetic and true north is your declination.

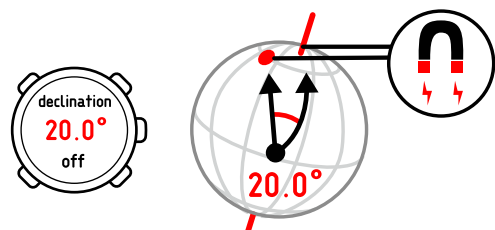

The declination value appears on most maps. The location of magnetic North changes yearly, so the most accurate and up-to-date declination value can be obtained from the internet (for example the National Geophysical Data Center for the USA).

Orienteering maps, however, are drawn in relation to magnetic North. This means that when you are using orienteering maps you need to turn the declination correction off by setting the declination value to 0 degrees.

To set the declination value:

1. In **MENU**, select **COMPASS**.
2. Turn the declination off or choose **W** (west) or **E** (east).
3. Set the declination value with [+ ] and [- Light ] .

## 8.2. Using compass

When you are in the **COMPASS** mode, you see two moving segments on the rim of the display. These point towards North. The hairline at 12 o'clock shows your heading and functions as a compass direction arrow. The numerical value of your heading is shown in the center of the display.

In **COMPASS** mode you can access the following views with [View]:

- Time: shows the current time
- Cardinals: shows the current heading in cardinal directions
- Bearing tracking: shows the direction between the heading and the set bearing

The compass will switch itself to power saving mode after a minute if no buttons are pressed. Reactivate it with [Start Stop] .

You can use the compass in two ways: you can use the bezel or the bearing tracking.

TIME ALTI & BARO COMPASS



### 8.2.1. Using bearing tracking

In bearing tracking you can lock a bearing (direction) and your Suunto Essential compass will guide you along it.

To use the bearing tracking:

1. Point the compass direction arrow in the direction you want to travel and press [Start Stop] . The bearing is now locked. Your current heading is shown in the middle of the display, and it will change according to your movements.
2. The arrows in the top row of the display point you in the direction you need to take in order to keep to your desired bearing. The « symbol confirms that you are aiming towards the right direction.



✎ *⌘: Pressing [- Light] also activates the backlight.*

You're hiking and you've just climbed a steep hill. Looking out over the valley below, you see a cabin on another hill. You decide to hike to the cabin through the valley. You point the direction arrow of your compass towards the cabin and lock the bearing. Once you're in the valley, the arrows in the display's top row show you where to go. Because the compass is active for only 40 seconds at a time to conserve battery life, now and then you need to re-start the compass to check your heading. Keep an eye on it and you'll get there soon.

## 9. Using memory

### 9.1. Alti-baro memory


**ALTI-BARO** automatically records changes in altitude or sea level air pressure for the last 7 days. Information will be stored depending on which profile is active at the moment of the recording. Records are stored every 30 minutes.

To view the records of the last 7 days:

1. In **MEMORY**, select **ALTI-BARO**.
2. Use [+] and [- Light] to browse through the records.

You are camping in the mountains. You want to predict tomorrow's weather, so you switch your to the BarometerBarometer profile for the night. In the morning you check the alti-baroalti-baro memory and note that the air pressure remained stable for the whole night. Hopefully this will continue during the day.

### 9.2. Viewing and locking logs

Logs recorded by the log recorder in the **ALTIMETER**, **BAROMETER** or **DEPTH METER** profile are stored in **LOGBOOK**. You can store up to 10 logs. A new log always replaces the oldest log in **LOGBOOK**. To save logs, you can lock them.  is shown when a log is locked. You can only lock up to 9 logs.

When entering **LOGBOOK**, you are shown the number of unlocked logs. You can then choose to either view or lock logs.

When you view logs, you are first shown a list of available logs complete with times and dates. You can scroll and then enter each log to view its summary information and details.

#### 9.2.1. Viewing logs

When viewing log summaries, you are shown

- A summary graph, time of recording and highest point
- Total descent, duration of descent, average descent speed
- Total ascent, duration of ascent and average ascent speed
- Altimeter split time (total log duration from start) and lap times (duration since last lap time)

When viewing log details, you are shown:

- A graph of the changes in altitude
- Time of recording
- Altitude/depth at the time of recording

To view the logs:

1. In **MEMORY**, select **LOGBOOK**.
2. Choose a log from the list.
3. Select **VIEW**.
4. Switch between log summaries with [+] and [- Light] .
5. View log details with [Mode] .



6. Increase and decrease scrolling speed and change direction with [+] and [- Light] . Stop with [Mode] .

 ✖️: *When scrolling the graph, your current position is in the middle of the graph.*

 ✖️: *Only altimeter logs include summaries.*

### 9.2.2. Locking and unlocking logs

To lock or unlock the logs:

1. In **MEMORY**, select **LOGBOOK**.
2. Choose a log from the list.
3. Select **LOCK / UNLOCK**.
4. Lock/unlock the log with [Mode] OR Cancel with [View] ).

## 9.3. Choosing recording interval

You can choose the recording interval in **REC INTERVAL** in **MENU**.


You can choose between five recording intervals:

- 1 second
- 5 seconds
- 10 seconds
- 30 seconds
- 60 seconds

When browsing through the intervals, the available recording time is shown in the lower part of the display.

To choose a recording interval:

1. In **MEMORY**, select **REC INTERVAL**.
2. Choose a recording interval using [+] and [- Light] .

 ヒント: *Short lasting activities with fast changes in altitude is better to record with faster recording interval (e.g. downhill skiing). Again, long time activities with slower changes in altitude is better to record with slower recording interval (e.g. hiking)*

## 10. お手入れとサポート

### 10.1. 取り扱い方法


Suunto Essential の取り扱いには、細心の注意を払ってください。本機の落下もしくは乱暴な取扱いは、内部の繊細な電子コンポーネントにダメージを与える可能性があります。

絶対に、Suunto Essential をご自身で解体・修理しないでください。本機に問題がある場合は、お近くのストン認定サービスセンターへご連絡ください。

ダイブコンピュータご使用後は、必ず真水で洗って乾かしてください。塩水での潜水後にはよくすすいでください。

水深センサー部、ウォーターコンタクト、ボタン、USB ケーブルポートには特に注意してください。ダイブコンピュータを洗う前に USB ケーブルを使った場合、使用後はケーブルのダイブコンピュータ接続部もすすいでください。


本機をご使用後は、真水ですすぎマイルドソープ（中性洗剤）できれいにした後、本体を湿った柔らかい布などで十分に水分を拭き取ってください。

 **メモ:** Suunto Essential をダイビング器材をすすぐ溜め水に放置しないでください。水中でもディスプレイはオンの状態のままでバッテリーを消費しています。


ストンが提供するアクセサリのみを使用してください。オリジナル以外のアクセサリを使用して発生したダメージは保証の対象外です。


 **ヒント:** Suunto Essential を [www.suunto.com/support](http://www.suunto.com/support) に製品登録ができます。

### 10.2. Replacing battery

 **メモ:** To reduce the risk of fire or burns, do not crush, puncture or dispose of used batteries in fire or water. Recycle or dispose of used batteries properly.

 **メモ:** If the threads of the battery compartment cover are damaged, send your device to an authorized Suunto representative for service.

 **メモ:** Suunto original battery replacement and strap kits must be used if available for your product. Kits are available at Suunto webshop and some authorized Suunto dealers. Not using these kits and careless battery replacement may void warranty.

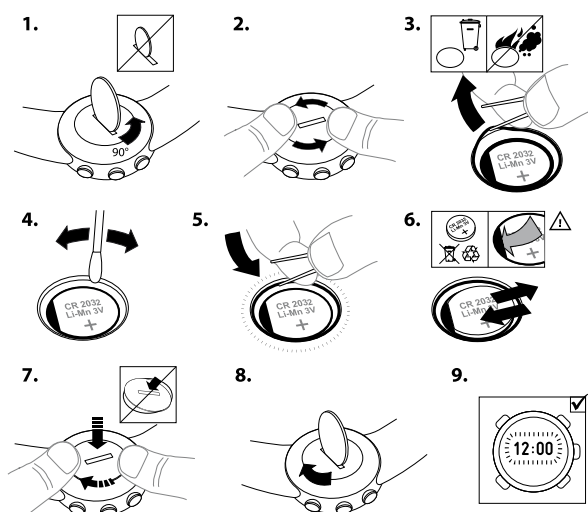

### 10.3. サポートの利用

更なるサポートご利用のためには、[www.suunto.com/support](http://www.suunto.com/support) にアクセスしてください。このサイトでは、Q&A や使用説明ビデオなど、様々なサポートをご提供しています。また、スントに直接質問を送ったり、スントサポート専門スタッフにEメール/電話をすることができます。

ほかにも、スント YouTube チャンネル ( [www.youtube.com/user/MovesCountbySuunto](http://www.youtube.com/user/MovesCountbySuunto) ) には、様々なハウツービデオがあります。


[www.suunto.com/support/](http://www.suunto.com/support/) に製品を登録ができます。

スントのサポート :







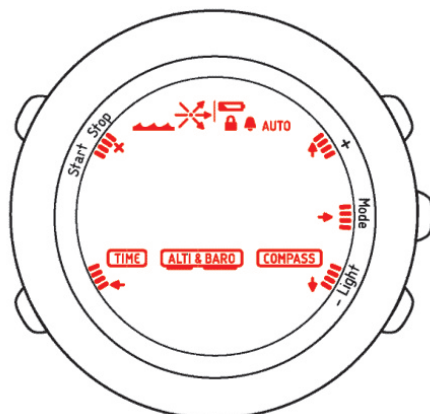





1. Suunto.com ( [www.suunto.com/support](http://www.suunto.com/support) ) のサポートでは製品の Q&A、またユーザーの質問やその回答などがご覧いただけます ( 一部英語 )。
2. オンライン上で答えが見つからない場合、スントサポート ( [support@suunto.com](mailto:support@suunto.com) ) に Eメールでお問い合わせください。
3. 電話でのお問合せ: このガイドブックの最後に記載されている最新のサポート電話番号一覧、または [www.suunto.com/support](http://www.suunto.com/support) で問合せ先をご確認いただけます。スントの認定カスタマーサポートスタッフが対応いたします。また必要に応じて電話中に問題解決することも可能です。

# 11. Specifications

## 11.1. Icons



The following icons are displayed in Suunto Essential:

	alarm
	alti-baro mode
AUTO	automatic profile
	back/return
	battery low
	button indicator
	button lock
	compass line
	compass mode
	depth meter profile
	down/decrease
	forward/accept
x	quick exit
	time mode
	up/increase



weather trend indicator

## 11.2. Technical data

### General

- Operating temperature -20°C ... +60 °C / -4°F ... +140°F
- Storage temperature -30 °C ... +60 °C / -22°F ... +140°F
- Water resistance: 30 m / 100 ft
- Lens: sapphire crystal
- User-replaceable battery CR2032
- Battery life-time: ~ 1 year in normal use

### Altimeter

- Display range: -500 m ... 9000 m / -1640 ft ... 32760 ft
- Resolution: 1 m / 3 ft

### Barometer

- Display range: 920 ... 1080 hPa / 27.13 ... 31.85 inHg
- Resolution: 1 hPa / 0.03 inHg

### Depth meter

- Depth display range: 0 ... 10 m / 0 ... 32.8 ft
- Resolution: 0.1 m

### Thermometer

- Display range: -20°C ... 60°C / -4°F ... 140°F
- Resolution: 1°C / 1°F

### Compass

- Resolution 1°

## 11.3. 保証

スントは、保証期間中、本限定保証の諸条件に従って、スントまたはスント認定サービスセンター（以下、サービスセンター）がその自由裁量において、a) 修理、または b) 交換、または c) 払い戻しのいずれかにより、素材または製造上の欠陥を無償にて修繕することを保証します。この限定保証は現地法がそれ以外を規定する場合を除き、購入国においてのみ有効かつ法的強制力を持ちます。

### 保証期間

保証期間は小売店での最初の購入日から開始します。製品の保証期間は別段の定めがある場合を除き、購入日から2年間となります。

アクセサリに対する保証期間は 1 年間となります。当該アクセサリは、ワイヤレスセンサー、送信機、充電器、ケーブル、充電式バッテリー、ストラップ、プレスレット、ホースを含みますが、これに限定されません。

## 除外・制限条項

本保証の適用範囲に以下は含まれません：

1. a. 傷、摩耗、または非金属ストラップの変色および / または材質の変化などの通常の使用損耗、 b) 不適切な取り扱いに起因する欠陥・不具合、または c) 使用目的または推奨されている使用法に反した使用、不適切なケア、過失、および落下または衝突などの事故に起因する欠陥または損傷。
2. 印刷物およびパッケージ。
3. スントによって製造または提供されていないすべての製品、付属品・アクセサリ、ソフトウェアの使用に起因する欠陥または欠陥の疑い。
4. 非充電式バッテリー。

スントは、製品または付属品・アクセサリの動作が中断されないこと、またはエラーがないことを保証せず、さらには、第三者によって提供されたハードウェアまたはソフトウェアを使用した場合に製品またはアクセサリが動作することを保証しません。

製品または付属品・アクセサリが以下の場合、本限定保証に法的拘束力はありません：

1. が使用目的を超えて開梱された場合。
2. が不正な補修部品を使用して修理された場合、かつ非公認のサービスセンターによって改変または修理された場合。
3. のシリアルナンバーが除去、改変された、または判読不能になったと、スントがその自由裁量で判断した場合。
4. が日焼け止め剤、防虫剤を含むがこれに限定されない化学薬品にさらされた場合。

## スント保証サービスの利用

スント保証サービスを利用するには、購入証明書を提出しなければなりません。保証サービスを受ける方法に関する説明については、[www.suunto.com/warranty](http://www.suunto.com/warranty) を閲覧、最寄りのスントの認定代理店へ連絡、またはスントの相談センターへお電話ください。

## 責任制限

適用される強制法により許される最大限の範囲内において、本限定保証はお客様の唯一かつ排他的な救済手段であり、明示的または黙示的問わず、すべての他の保証に代わるものです。スントは、見込まれる便益の喪失、データの喪失、使用不能による損失、資本コスト、任意の代替機器または施設に関する費用、サードパーティによるクレーム、製品の購入または利用または保証違反による資産への損傷、契約違反、不注意、不正行為、または任意の法理あるいは公理を含むがこれに限定されない特殊損害、偶発的損害、懲罰的損害または間接的損害については、スントがかかる損傷の可能性を予期できていた場合であっても、その責任を負わないものとします。スントは保証サービスの提供における遅延に責任を負わないものとします。

## 11.4. CE

Suunto Oy は、この製品が 1999/5/EC 指令の必須要件およびその他の関連条項に準拠していることをここに宣言します。

## 11.5. Patent notice

This product is protected US Patent application serial number 11/152,076 and corresponding patents or patent applications in other countries. Additional patent applications are pending.

## 11.6. 商標

Suunto Essential、そのロゴ、およびその他のスントブランドの商標と製造名は Suunto Oy の登録商標または商標です。無断複写・転載を禁じます。

## 11.7. 著作権

Copyright © Suunto Oy.無断複写・転載を禁じます。Suunto、スント製品名、そのロゴ、およびその他のスントブランド商標および名称は Suunto Oy の登録商標または商標です。この文書およびその内容は、Suunto Oy が所有しており、顧客がスント製品の操作に関する知識および情報を収集することだけを目的としています。その内容は、Suunto Oy との事前の書面による同意なしに、いかなる他の目的でも使用または配布および / または通知、開示または複製することはできません。弊社は本文書に含まれる情報が包括的かつ正確であることに十分な配慮を行っていますが、明示的または黙示的問わず正確性に対する保証はありません。本文書の内容は予告なく変更されることがあります。この文書の最新版は [www.suunto.com](http://www.suunto.com) でダウンロードできます。

# インデックス

alarm.....	13	logs.....	17 , 19, 20, 24, 25
ALTI & BARO.....	14	memory.....	24, 25
ALTI & BARO mode.....	14	modes.....	11 , 14, 21
altimeter.....	17	profiles.....	15, 17, 18, 19, 20
altimeter profile.....	17	readings.....	14
altitude difference measurer.....	17	recording.....	17 , 19, 20
automatic.....	19	recording interval.....	25
automatic profile.....	19	recording logs.....	17 , 19
backlight.....	10	reference values.....	15
barometer.....	18	setting.....	11, 12, 13, 15
barometer profile.....	18	setting declination value.....	22
battery.....	26	split.....	24
bearing tracking.....	23	stopwatch.....	12
button lock.....	10	storm alarm.....	16
button tone.....	9	sunrise and sunset.....	12
calibrating.....	21	technical data.....	29
calibrating compass.....	21	TIME.....	11
changing.....	9, 10, 11, 26	TIME mode.....	11
COMPASS.....	21, 22	time settings.....	11
correct.....	14	tone guides.....	10
correct readings.....	14 , 21	units.....	9
countdown timer.....	12	unlocking.....	25
date.....	11	using.....	22
declination value.....	22	using ALTI & BARO mode.....	
depth meter.....	20	14, 15, 16, 17, 19	
depth meter profile.....	20	using ALTI & BARO mode.....	
dual time.....	12	14 , 15, 16, 17, 18, 20	
general settings.....	9, 10	using COMPASS mode.....	21, 22, 23
getting correct readings.....	21	using profiles.....	17 , 18, 19, 20
icons.....	28	using TIME mode.....	11, 12, 13
incorrect.....	14	viewing.....	24
incorrect readings.....	14	viewing logs.....	24
language.....	10	views.....	21
lap.....	24	weather trend indicator.....	16
locking.....	24 , 25	お手入れ.....	26
locking and unlocking logs.....	25	サポート.....	27
locking and unlocking logs.....	25	取り扱い.....	26
locking logs.....	24	洗淨.....	26





# SUUNTO CUSTOMER SUPPORT

1. [www.suunto.com/support](http://www.suunto.com/support)  
[www.suunto.com/register](http://www.suunto.com/register)
2. **AUSTRALIA (24/7)** +61 1800 240 498  
**AUSTRIA** +43 72 088 3104  
**BELGIUM** +32(0)78 483 936  
**CANADA (24/7)** +1 855 624 9080  
**中国 (CHINA)** +86 400 8427507  
**中国香港 (CHINA - Hong Kong)** +852 58060687  
**DENMARK (EN, SV)** +45 89872945  
**FINLAND** +358 94 245 0127  
**FRANCE** +33 48 168 0926  
**GERMANY** +49 893 803 8778  
**ITALY** +39 029 475 1965  
**JAPAN** +81 34 520 9417  
**NETHERLANDS** +31 10 713 7269  
**NEW ZEALAND (24/7)** +64 988 75 223  
**POLAND** +48 1288 10196  
**PORTUGAL (EN, ES)** +35 1308806903  
**RUSSIA** +7 499 918 7148  
**SPAIN** +34 911 143 175  
**SWEDEN** +46 85 250 0730  
**SWITZERLAND** +41 44 580 9988  
**UK (24/7)** +44 20 3608 0534  
**USA (24/7)** +1 855 258 0900

**Manufacturer:**

Suunto Oy  
Tammiston kauppatie 7 A,  
FI-01510 Vantaa FINLAND



© Suunto Oy

Suunto is a registered trademark of Suunto Oy. All Rights reserved.